

# Jibset

From O'Reilly Industries LLC

[info@skidworks.com](mailto:info@skidworks.com)

763-742-6473



**(JS2000-4 shown - Your Jibset may vary from photo)**

Thank you for purchasing your custom Jibset Winch Jib (Hereinafter referred to as “Jibset” or “jibset”) from O’Reilly Industries LLC. The following rules must be followed and applied when operating your Jibset attached only to your skid steer, tele handler or other skid steer compatible host machine (hereinafter referred to as “host machine” or “Host Machine”):

1. Host Machine (Tele handler or skid steer or other) operator must be trained, **certified** and experienced in operating a crane. This includes holding *any* required license and/or training to operate your Jibset and cable deployment more than 3 feet off the ground **or** more than 3 feet below the ground level surface from which host machine is **parked**.
2. It is the **operators responsibility** to meet or exceed any local, state and/or federal laws and/or ordinances and/or requirements related to the hoisting of any material or object while operating your Jibset purchase.

3. A copy of this document must stay with your Jibset and be reviewed by operator before every operation.
4. Your Jibset is rated to 2,000 max load: This is with Host Machine parked (stationary) with outriggers fully deployed (when applicable). Your Host Machine may have a lower rating at 4' extension from Host Machine (Host Machine position with Jibset attached); **always stay below lesser of Host Machine load chart maximum load rating at 4' extended position OR Jibset (jib and winch) max rating of 2,000 lbs. (two thousand pounds).** Call O'Reilly Industries LLC at 763-742-6473 if you are unsure of this safety directive. (Your Jibset length must be included as part of the existing host machine boom, if applicable, when determining load rating; For Example: (When applicable) In fully retracted telehandler boom position you must refer to your **telehandler load chart at the 4' mark** when determining max load when the jibset is attached to your telehandler boom.
5. Your Jibset is NOT to be operated with any type of rotating/oscillating boom or fork carriage.
6. Maximum cross winds may not exceed 6 mph when your Jibset cable is deployed more than 7' (seven feet).
7. Maximum 18' deployed cable when operating your Jibset.
8. **Host Machine must be parked on a flat, level surface when deploying cable and/or hoisting and/or lowering any load with your Jibset.**
9. Your Jibset operator must familiarize themselves with the physical appearance and operation of the unit; it must be inspected before each use and taken out of service if any noticeable changes (including, but not limited to cracked welding; structural disfigurement; leaking oil; frayed cables; etc) are observed. Please contact O'Reilly Industries LLC at 763-742-6473 before putting back in service if these *or other changes* are observed **or** apparent.
10. All ground personnel must be outside of a minimum 20' radius from Host Machine while more than 10' (Ten Feet) of cable is deployed from your Jibset.
11. Cable should be replaced once per year with minimum of 4,000 lb rating by an experienced crane equipment company.
12. Host Machine / Jibset operator may not be under the influence of **any** medication, controlled substance, alcohol, narcotic or **any other mood altering** product while in use.
13. It is the responsibility of the customer and/or his/her assigns to ensure the Host Machine is being operated within factory authorized settings, tolerances

and usage limits; *and* observe all safety precautions and maintenance requirements while attached to your Jibset.

15. Your **Jibset is NEVER to be used in any capacity as a personnel carrier or hoist.**

**REMINDER:** NEVER exceed the rating operating capacity or load chart of the Host Machine. The Jibset should **never** carry a load greater than the 4' (four foot) setting of the Host Machine load chart itself and **never exceed 2,000 lbs or Host Machine requirements, whichever is LESS.** **WHEN APPLICABLE: The length of the Jibset is considered as part of the boom itself when determining load rating IE in the case of Host Machine being a Telescopic Handler.**

Errors and Omissions: Errors and/or omissions in this document are unintentional and will be corrected upon discovery.

Revised January 2022